

WIRING DIAGRAM

XP560E 2020

1. Battery charger terminal
2. Remote control unit
3. OFF/LOCK switch
4. Parking/Unlock switch
5. Buzzer
6. Steering lock relay
7. Turn signal/hazard relay
8. Storage box light
9. Seat lock fuse
10. Joint coupler
11. Crankshaft position sensor
12. AC magneto
13. Rectifier/regulator
14. Ignition system relay
15. Signaling system fuse
16. Ignition fuse
17. Taillight fuse
18. Radiator fan motor fuse
19. Fuel injection system fuse
20. Backup fuse
21. Diode 3
22. Battery
23. Engine ground
24. Main fuse
25. Starter relay
26. Starter motor
27. Diode 1
28. Sidestand relay
29. Diode 2
30. Fuel injection system relay
31. Starting circuit cut-off relay
32. Sidestand switch
33. Diode 4
34. Handlebar switch (right)
35. Engine stop switch
36. ON/start switch
37. Hazard switch
38. Mode switch
39. Front brake light switch
40. Headlight relay (dimmer)
41. Smart key system relay (unlock)
42. Seat/fuel lid lock solenoid
43. Smart key system relay (lock)
44. Meter assembly
45. Smart key system indicator light
46. Meter light
47. Tachometer
48. Fuel level warning light
49. MIL (Malfunction indicator light)
50. Traction control system indicator light
51. Turn signal indicator light (left)
52. Turn signal indicator light (right)
53. Steering damper and suspension warning light

54. ABS warning light
55. High beam indicator light
56. Multi-function display
57. ECU (Engine Control Unit)
58. Ignition coil
59. Spark plug
60. Grip warmer connector
61. Grip warmer (left) (OPTION)
62. Grip warmer (right) (OPTION)
63. Coolant temperature sensor
64. Intake air temperature sensor
65. Intake air pressure sensor
66. Lean angle sensor
67. O₂ sensor
68. Injector #1
69. Injector #2
70. Throttle servo motor
71. Accelerator position sensor
72. Throttle position sensor
73. Fuel sender
74. Fuel pump
75. Front wheel sensor
76. Rear wheel sensor
77. ABS ECU (Electronic Control Unit)
78. YDT coupler
79. Radiator fan motor
80. Radiator fan motor relay
81. Horn
82. Handlebar switch (left)
83. Rear brake light switch
84. Dimmer/pass switch
85. Horn switch
86. Menu switch
87. Select switch
88. Turn signal switch
89. Tail/brake light
90. License plate light
91. Rear turn signal light (right)
92. Rear turn signal light (left)
93. Front turn signal light (right)
94. Front turn signal light (left)
95. Auxiliary light
96. Headlight (high)
97. Headlight (low)
98. Headlight control unit
99. Auxiliary DC jack
100. ABS solenoid fuse
101. ABS motor fuse
102. Electronic throttle valve fuse
103. Headlight fuse
104. Auxiliary DC jack fuse
105. ABS ECU fuse
106. Storage box light switch
107. Anti-theft alarm (OPTION)
108. Steering lock unit
109. Centerstand lock solenoid

- A. Wire harness
- B. Negative battery sub-wire harness
- C. Headlight sub-wire harness


XP560D 2020

1. Battery charger terminal
 2. Remote control unit
 3. OFF/LOCK switch
 4. Parking/Unlock switch
 5. Buzzer
 6. Steering lock relay
 7. Turn signal/hazard relay
 8. Storage box light
 9. Windshield motor fuse
 10. Joint coupler
 11. Crankshaft position sensor
 12. AC magneto
 13. Rectifier/regulator
 14. Ignition system relay
 15. Signaling system fuse
 16. Ignition fuse
 17. Taillight fuse
 18. Radiator fan motor fuse
 19. Fuel injection system fuse
 20. Backup fuse
 21. Diode 3
 22. Battery
 23. Engine ground
 24. Main fuse
 25. Starter relay
 26. Starter motor
 27. Diode 1
 28. Sidestand relay
 29. Diode 2
 30. Fuel injection system relay
 31. Starting circuit cut-off relay
 32. Sidestand switch
 33. Diode 4
 34. Handlebar switch (right)
 35. Engine stop switch
 36. ON/start switch
 37. Hazard switch
 38. Mode switch
 39. Headlight relay (dimmer)
 40. Brake light relay
 41. Brake light fuse
 42. Front brake light switch
 43. Rear brake light switch
 44. Grip cancel switch
 45. Smart key system relay (unlock)
 46. Storage compartment lid lock solenoid
 47. Seat/fuel lid lock solenoid
 48. Smart key system relay (lock)
 49. Windshield drive unit relay (down)
 50. Windshield drive unit
 51. Windshield drive unit relay (up)
 52. Seat heater relay (control)
 53. Seat heater relay (power)
 54. Seat heater
 55. Meter assembly
 56. Smart key system indicator light
 57. Meter light
 58. Tachometer
 59. Fuel level warning light
 60. MIL (Malfunction indicator light)
 61. Traction control system indicator light
 62. Turn signal indicator light (left)
 63. Turn signal indicator light (right)
 64. Cruise control system indicator light
 65. Cruise control setting indicator light
 66. Steering damper and suspension warning light
 67. ABS warning light
 68. High beam indicator light
 69. Multi-function display
 70. ECU (Engine Control Unit)
 71. Ignition coil
 72. Spark plug
 73. Grip warmer connector
 74. Grip warmer (left)
 75. Grip warmer (right)
 76. Coolant temperature sensor
 77. Intake air temperature sensor
 78. Intake air pressure sensor
 79. Lean angle sensor
 80. O₂ sensor
 81. Injector #1
 82. Injector #2
 83. Throttle servo motor
 84. Accelerator position sensor
 85. Throttle position sensor
 86. Fuel sender
 87. Fuel pump
 88. Front wheel sensor
 89. Rear wheel sensor
 90. ABS ECU (Electronic Control Unit)
 91. YDT coupler
 92. Radiator fan motor
 93. Radiator fan motor relay
 94. Horn
 95. Handlebar switch (left)
 96. Cruise control power switch
 97. Cruise control setting switch
 98. Dimmer/pass switch
 99. Horn switch
 100. Menu switch
 101. Select switch
 102. Turn signal switch
 103. Tail/brake light
 104. License plate light
 105. Rear turn signal light (right)
 106. Rear turn signal light (left)
 107. Front turn signal light (right)
 108. Front turn signal light (left)
 109. Auxiliary light
 110. Headlight (high)
 111. Headlight (low)
 112. Headlight control unit
 113. Cruise control fuse
 114. Auxiliary DC jack
 115. ABS solenoid fuse
 116. ABS motor fuse
 117. Electronic throttle valve fuse
 118. Headlight fuse
 119. Auxiliary DC jack fuse
 120. ABS ECU fuse
 121. Storage box light switch
 122. Anti-theft alarm (OPTION)
 123. Steering lock unit
 124. Centerstand lock solenoid
- A. Wire harness
B. Negative battery sub-wire harness
C. Headlight sub-wire harness


COLOR CODE

B	Black
Br	Brown
Ch	Chocolate
Dg	Dark green
G	Green
Gy	Gray
L	Blue
Lg	Light green
O	Orange
P	Pink
R	Red
Sb	Sky blue
V	Violet
W	White
Y	Yellow
B/G	Black/Green
B/L	Black/Blue
B/W	Black/White
B/Y	Black/Yellow
Br/B	Brown/Black
Br/L	Brown/Blue
Br/R	Brown/Red
Br/W	Brown/White
Br/Y	Brown/Yellow
G/B	Green/Black
G/L	Green/Blue
G/R	Green/Red
G/W	Green/White
G/Y	Green/Yellow
Gy/G	Gray/Green
Gy/W	Gray/White
L/B	Blue/Black
L/G	Blue/Green
L/R	Blue/Red
L/W	Blue/White
L/Y	Blue/Yellow
Lg/B	Light green/Black
Lg/L	Light green/Blue
Lg/W	Light green/White
O/L	Orange/Blue
O/W	Orange/White
P/B	Pink/Black
P/W	Pink/White
R/B	Red/Black
R/G	Red/Green
R/L	Red/Blue
R/W	Red/White
R/Y	Red/Yellow
V/W	Violet/White
W/G	White/Green
W/L	White/Blue
W/R	White/Red
W/Y	White/Yellow
Y/B	Yellow/Black
Y/G	Yellow/Green
Y/L	Yellow/Blue
Y/R	Yellow/Red
Y/W	Yellow/White

XP560E 2020
WIRING DIAGRAM

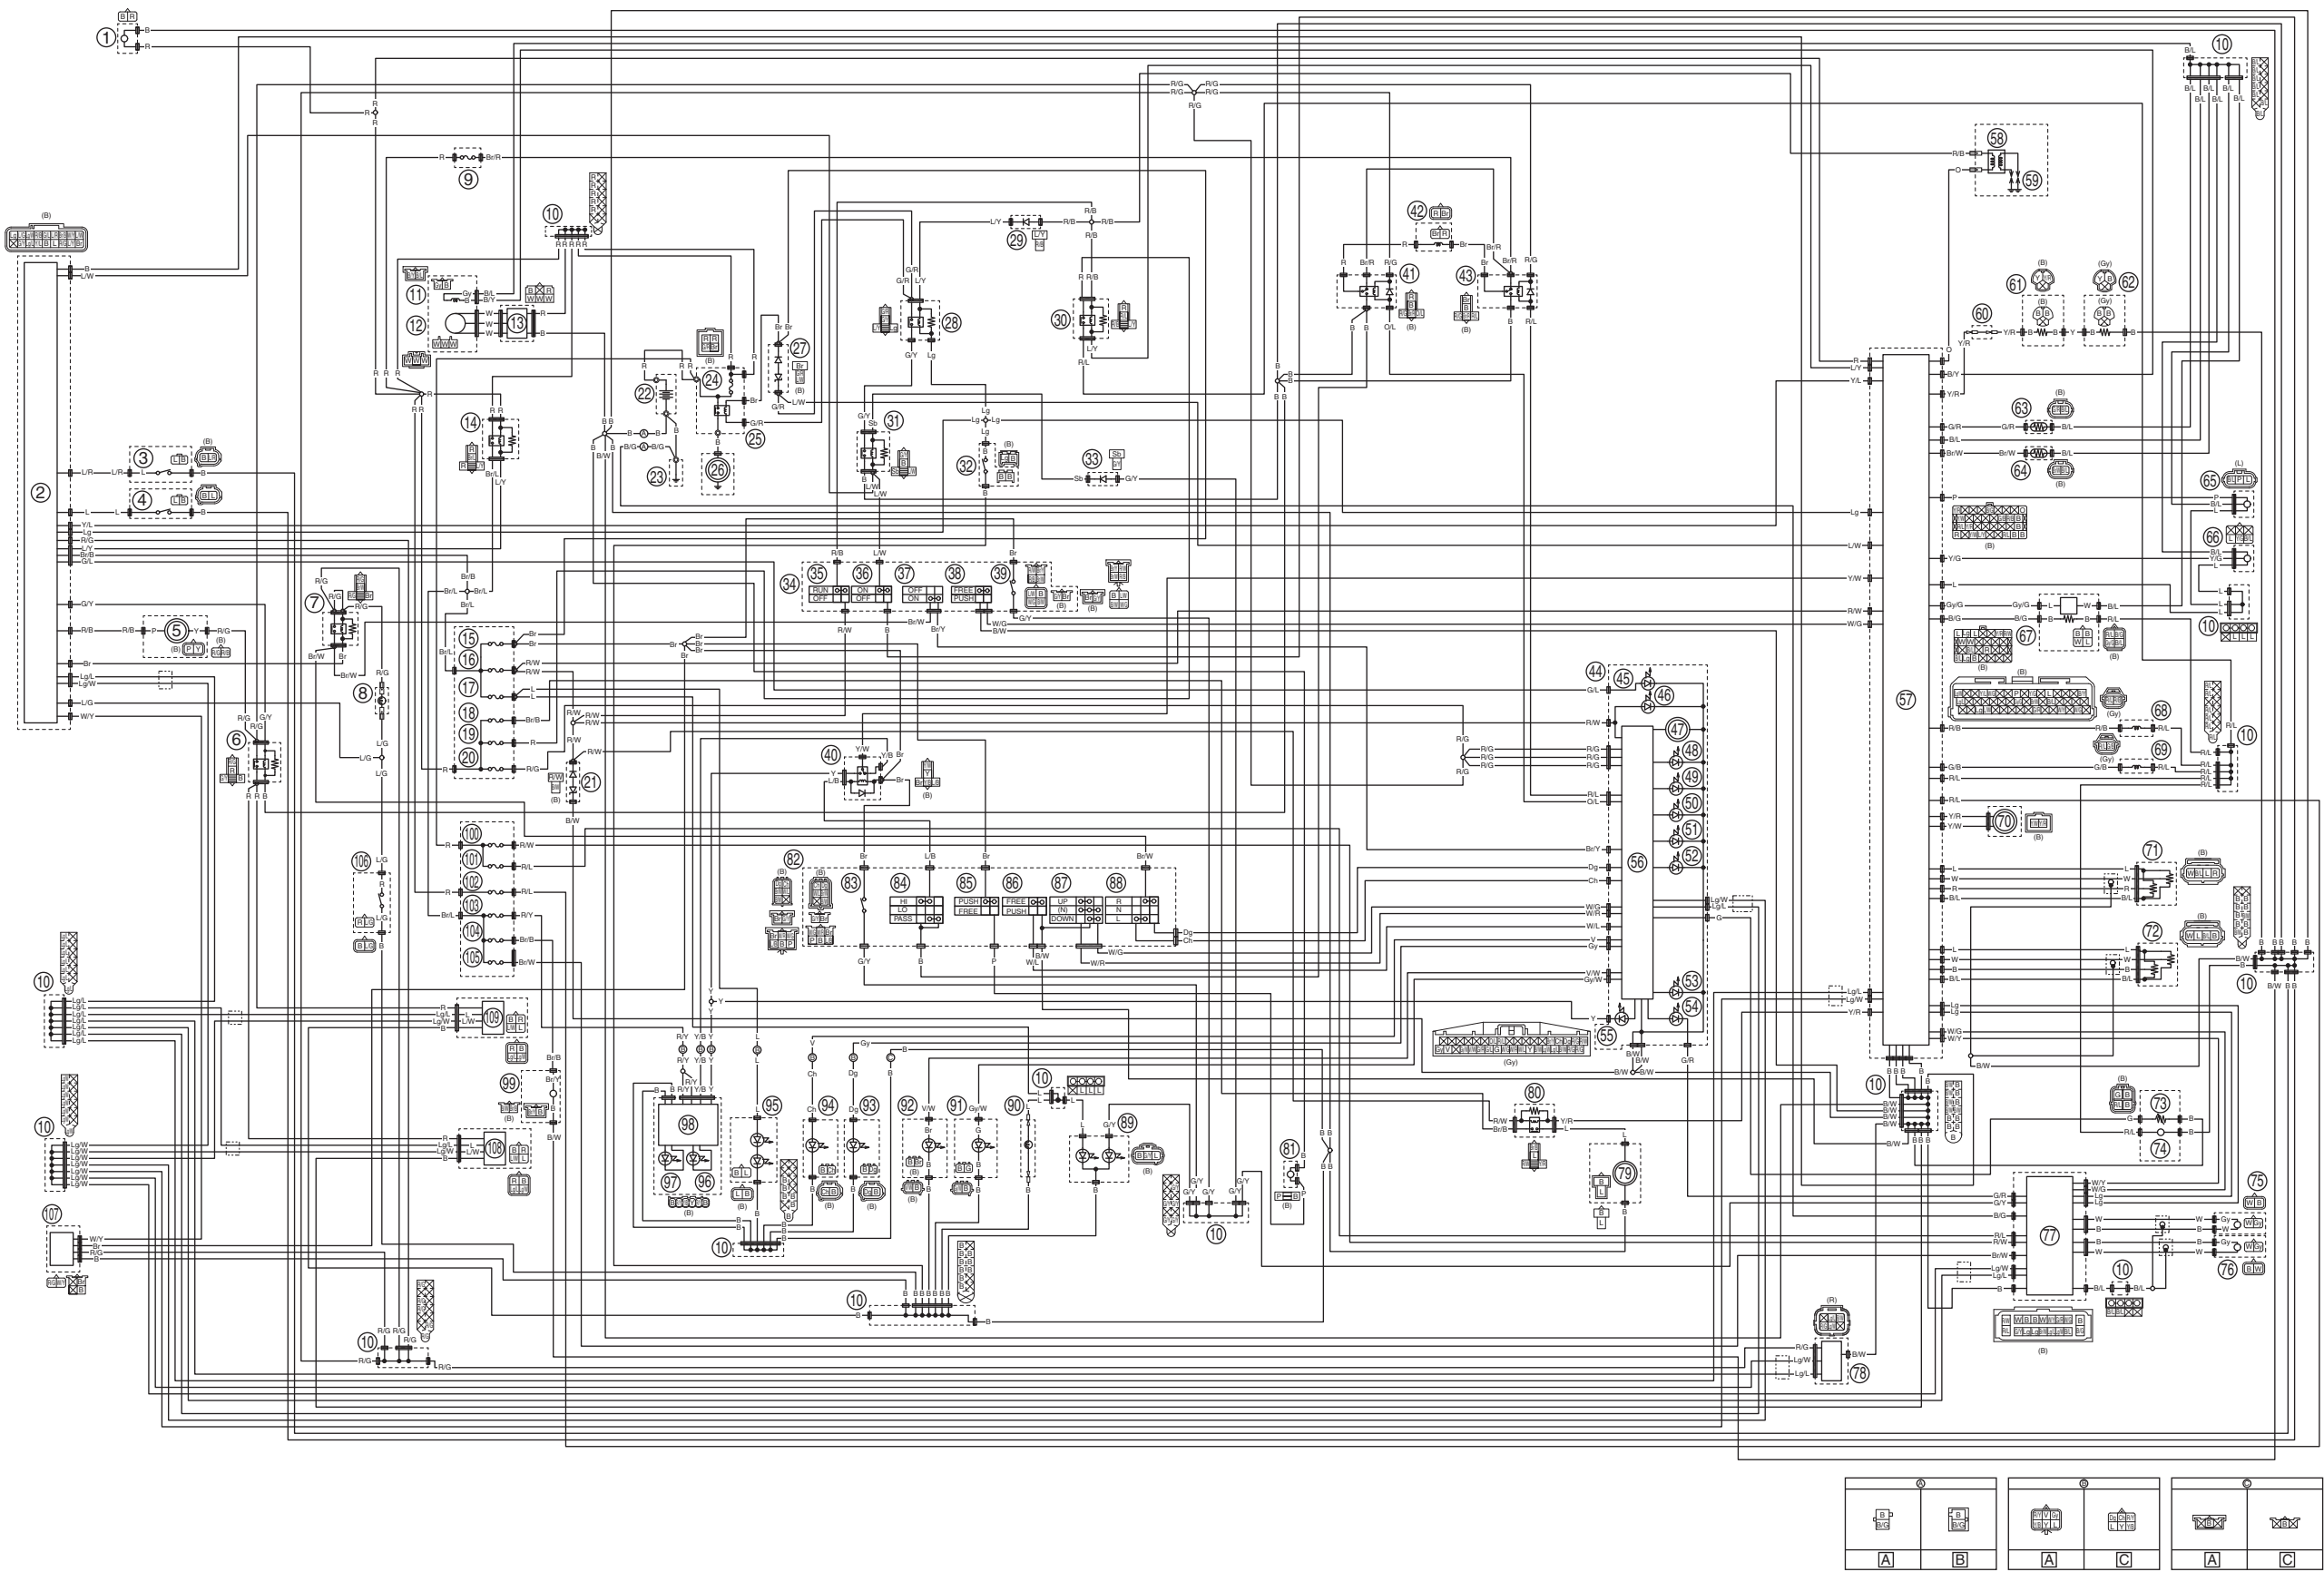


XP560E 2020
WIRING DIAGRAM

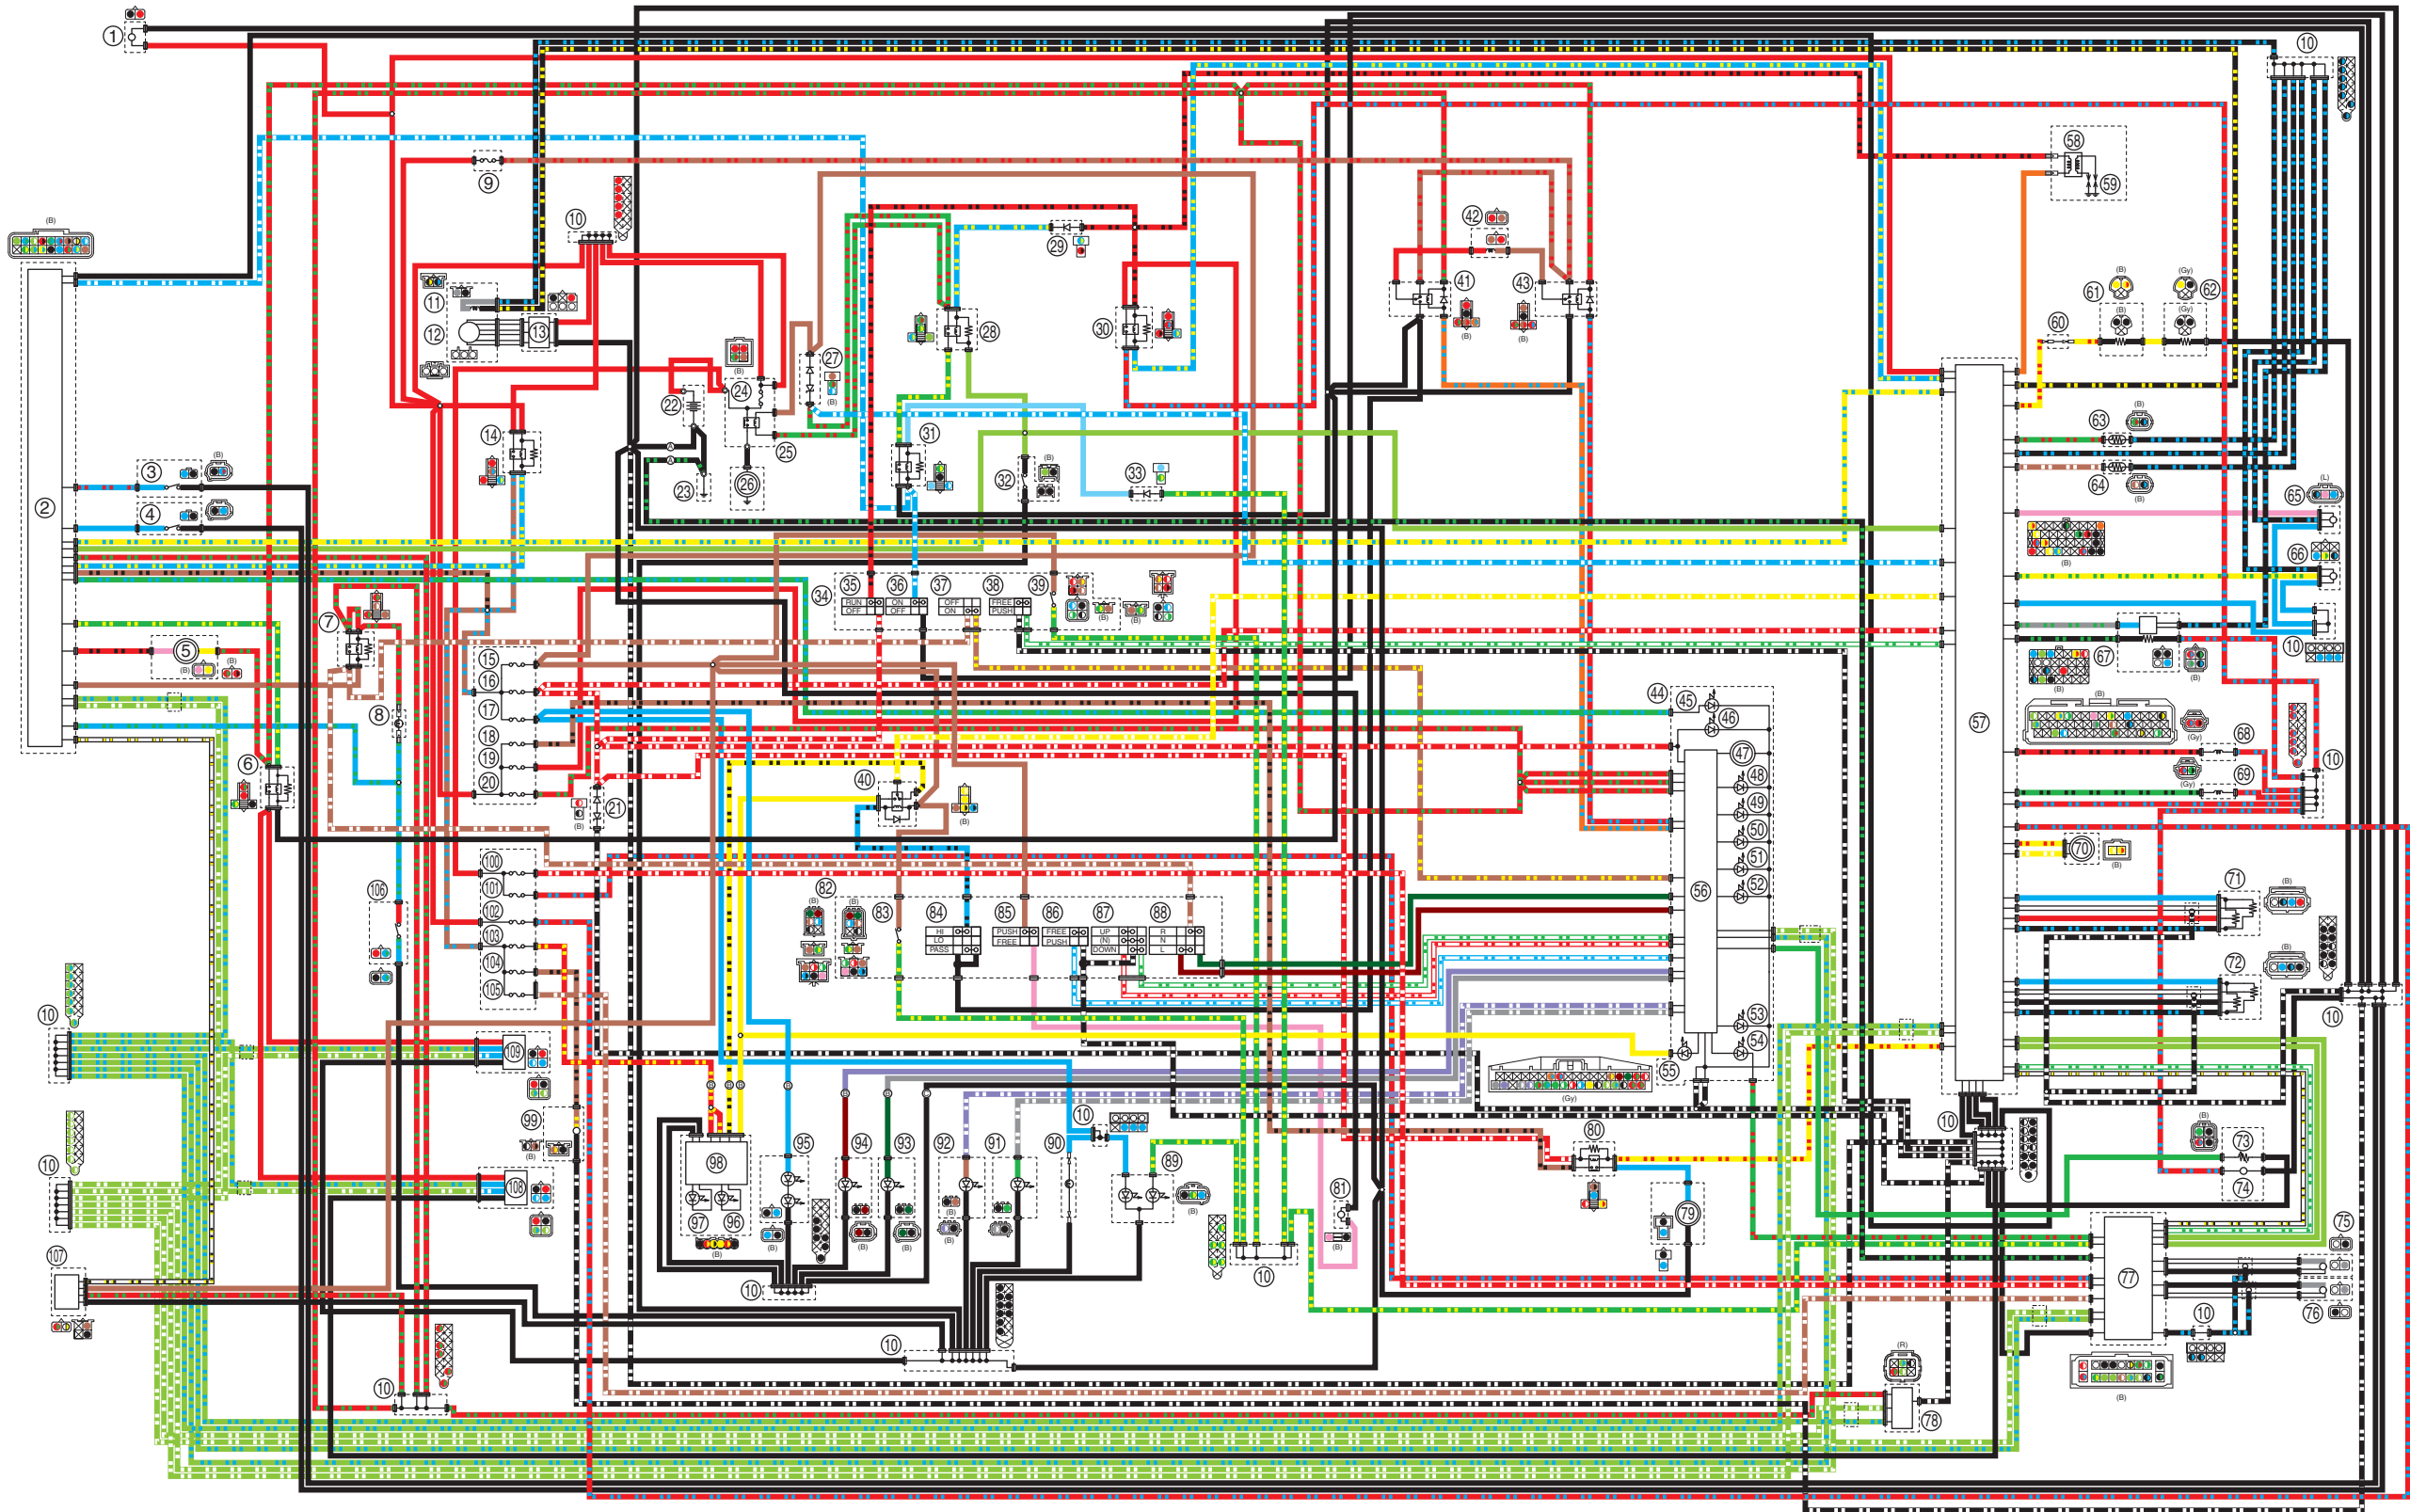

					
A	B	A	C	A	C

XP560D 2020
WIRING DIAGRAM

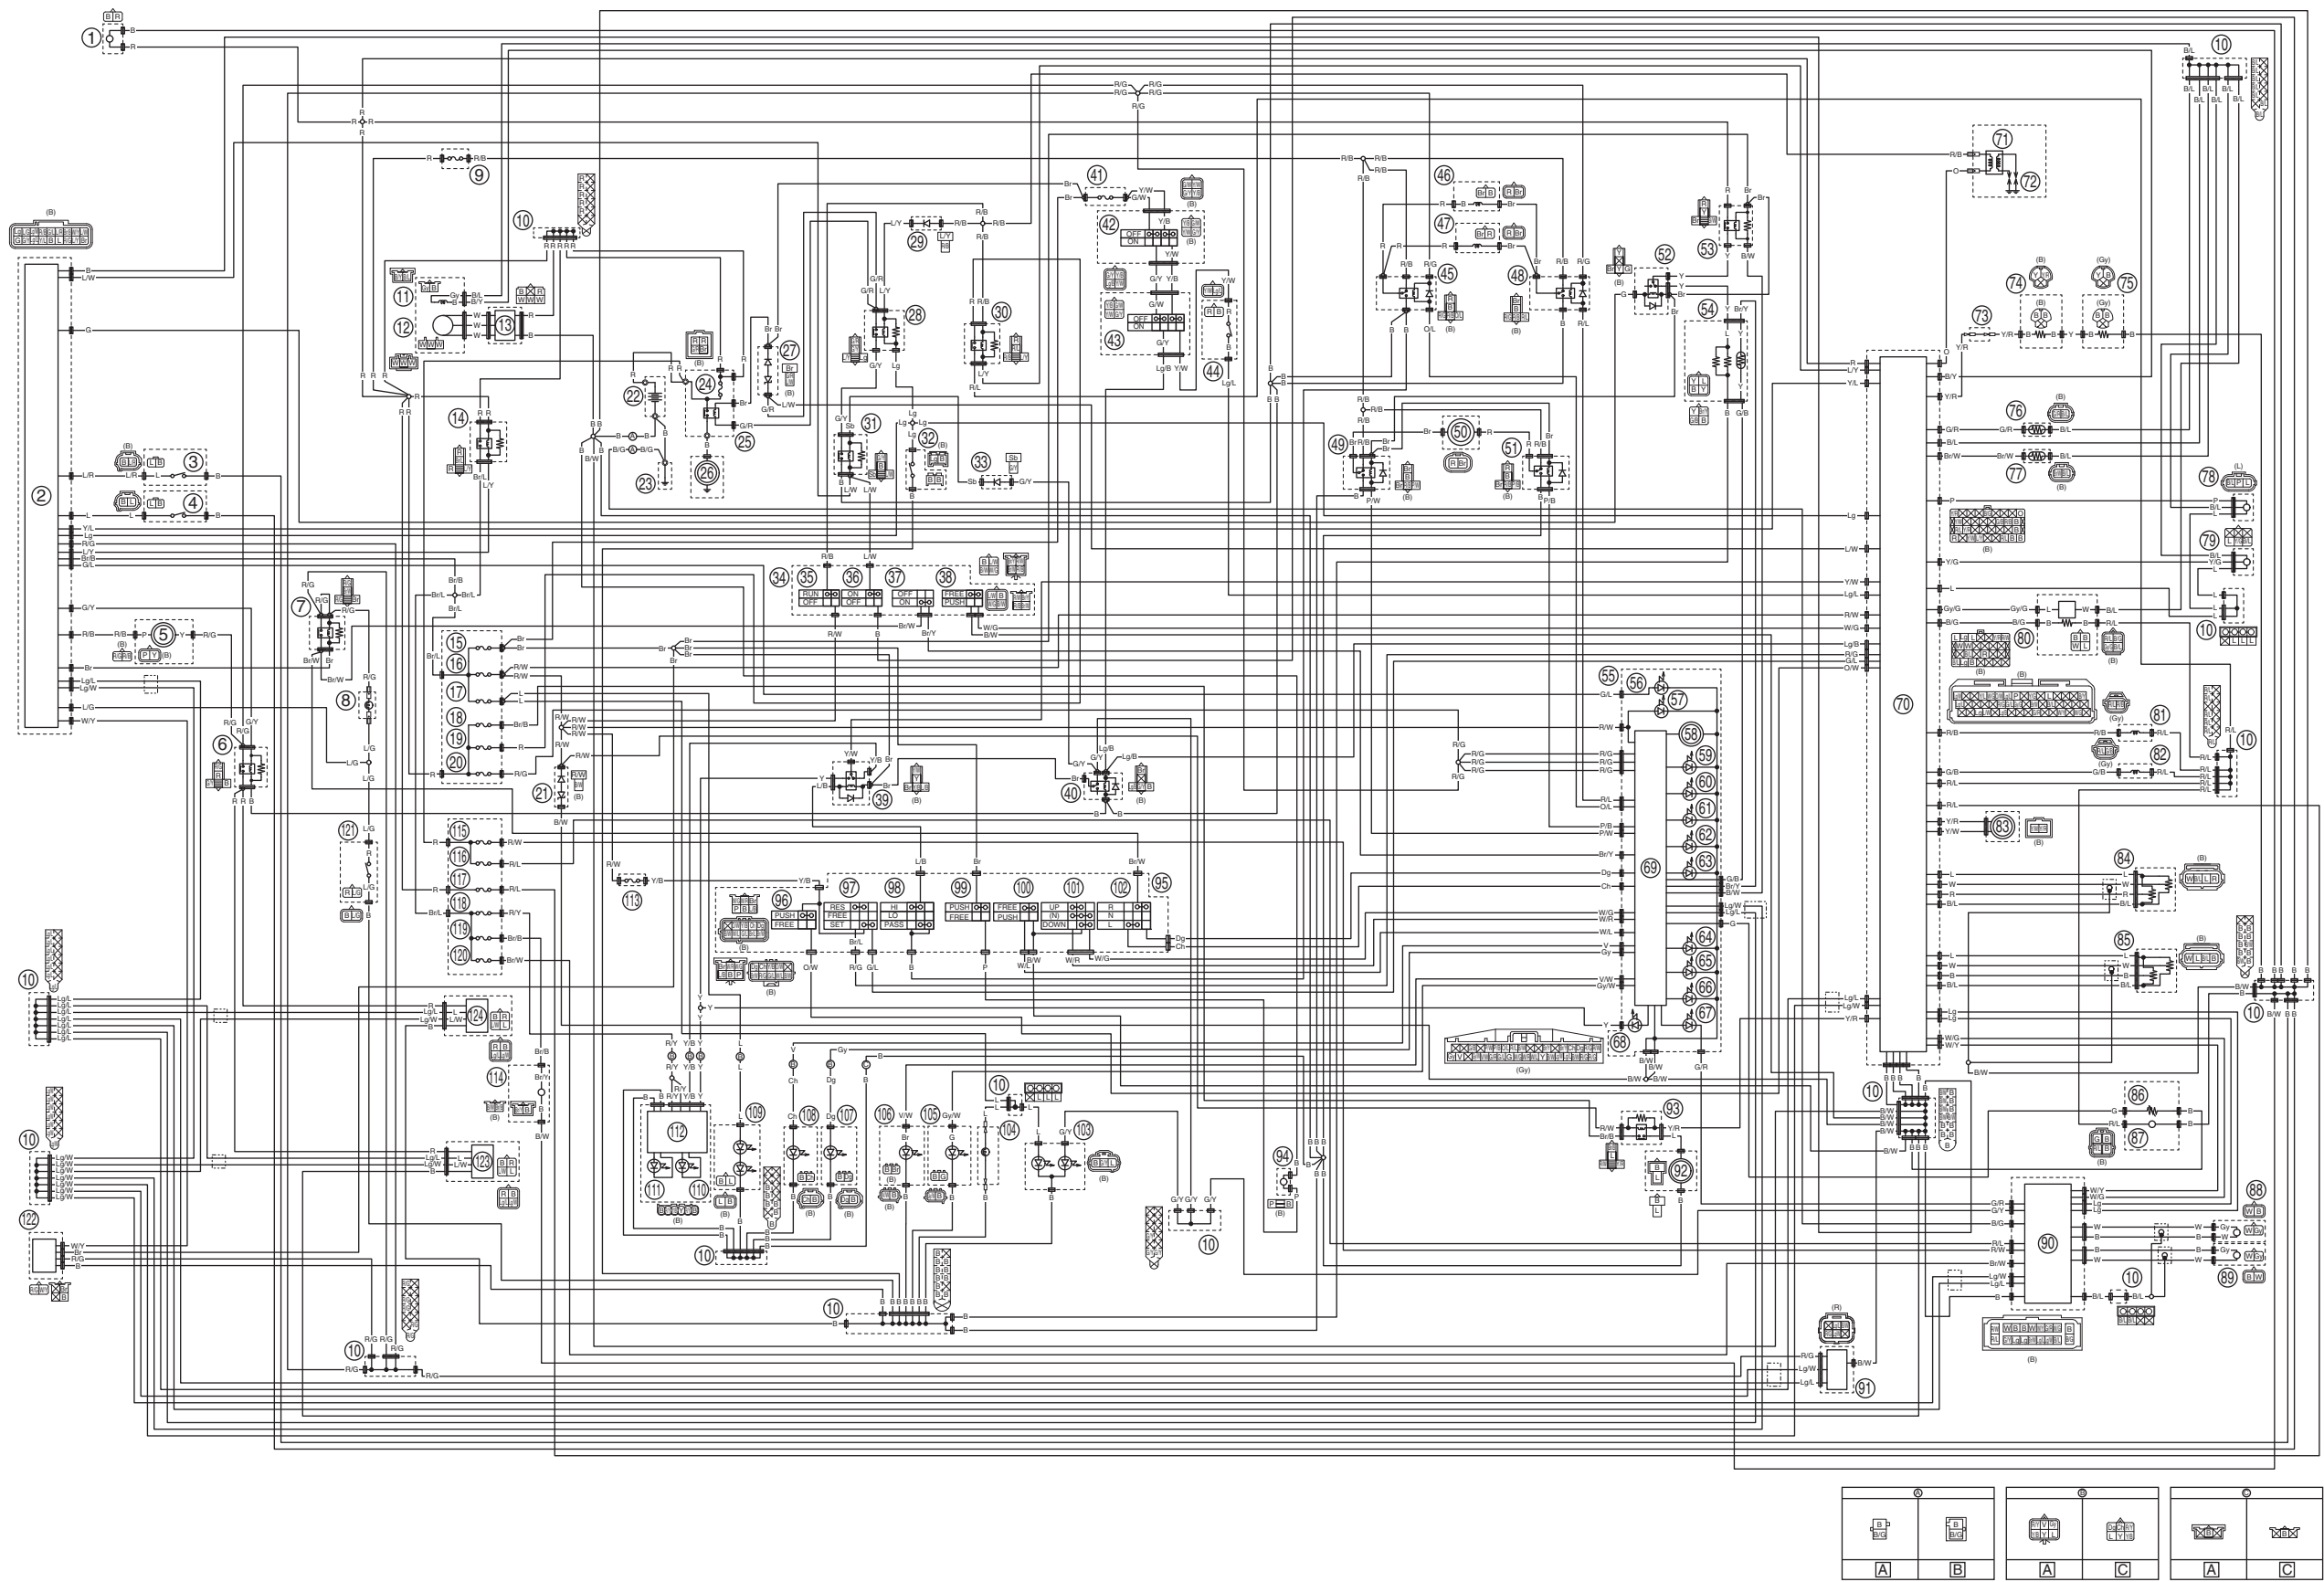

XP560D 2020 WIRING DIAGRAM

